

# DrumQuik® UDA

## 3-Port Dispensing System for Professional Chemical Management

DrumQuik® 3-Port Universal Dispensing Adaptor (UDA) is an easy-to-use product for extracting liquids and chemicals from rigid containers in end-use applications. The reusable dip-tube can easily be moved from one container to the next without messy drips or spills and is more cost-effective than stainless steel “stingers.”

The 3-Port UDA features a 3/4" male NPT thread that mates with common containers, bung plugs and caps. The adaptor ports enable simultaneous chemical extraction, venting and application of blanket gas or air. In addition, the third port can be used to recirculate priming chemical to the container in metering pump applications. DrumQuik 3-Port UDA facilitates easy, spill-free drum changeouts and offers unprecedented flexibility in a closed system for safely dispensing chemicals. Optional system components including foot valves, air filters and vent check valves are also available.

FEATURES	BENEFITS
3/4" male NPT thread	Mates with steel and plastic drums, IBCs, jerry cans and Nalgene® bottles
3-port design	Enables flexible system configuration based on application needs
Mates with Colder couplings	Easily disconnect/reconnect system tubing
Standard bung plug and cap accessories available	Easily connect to virtually any container

### Specifications

#### Pressure:

Vacuum to 120psig.

#### Temperature:

32° to 120°F (0° to 49°C)

#### Clearance Hole Diameter\*:

1.06" (27mm)

\*For cap applications

#### Materials:

##### 3-port UDA and nut:

Food grade, virgin polypropylene

**O-ring:** Food grade EPDM (FKM optional)

##### Dip-tube:

Food grade, virgin polyethylene (HDPE)

##### Bushings and plugs:

Black glass-filled polypropylene



### Applications:

- Acids, caustics and solvents
- Agricultural pesticides and fertilizers
- Institutional cleaning chemicals
- Paints and coatings
- Fragrance production
- Edible oils and flavorings
- Pharmaceutical sterilants and chemicals
- Waste water treatment chemicals

## 3-Port Adaptors

PART NUMBER	DESCRIPTION
DQUA3PKIT	3-port adaptor, EPDM seal, locking nut, 35.5" (905mm) dip-tube, 1/2" x 3/8" & 1/2" x 1/4" reducer bushings and 1/4" & 3/8" NPT plugs
DQUA3PKIT202	3-port adaptor, FKM seal, locking nut, 35.5" (905mm) dip-tube, 1/2" x 3/8" & 1/2" x 1/4" reducer bushings and 1/4" & 3/8" NPT plugs
DQUA3P	3-port adaptor bulk packaged (1/2" female NPT liquid outlet port, 3/8" & 1/4" NPT vent/recirculation ports)
DQUA3PNUT	Locking nut for the 3-port adaptor
2717000	EPDM seal for the 3-port adaptor
2717100	FKM seal for the 3-port adaptor


## Dip-tubes: HDPE

PART NUMBER	DESCRIPTION
DQPRODT0410	13.0" (330mm) long for 5 gal/25L jerry cans
DQPRODT0985	35.5" (905mm) long for 55 gal/200L drums
DQPRODT1070	39.0" (990mm) long for 275 gal/1040L IBCs
DQPRODT1274	47.0" (1194mm) long for 330 gal/1250L IBCs



Visit us at [www.colder.com](http://www.colder.com) or call 651-645-0091 to get a free catalog CD or to find your local distributor.

Can be used with many standard Colder quick disconnect couplings and standard bung plugs and bottle caps.

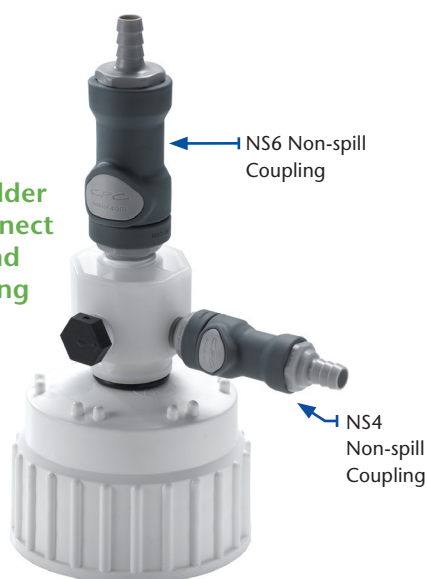


DrumQuik® is a registered trademark with the U.S. Patent & Trademark Office.

**WARNING:** Due to the wide variety of possible fluid media and operating conditions, unintended consequences may result from the use of this product, all of which are beyond the control of Colder. It is the user's responsibility to carefully determine and test for compatibility for use with their application. All such risks shall be assumed by the buyer.

**WARRANTY:** All sales are subject to Colder Products Company's limited express warranty set forth in the Colder catalog. Contact your local distributor or Colder Customer Service for warranty provisions.

## DrumQuik® UDA 3-Port System

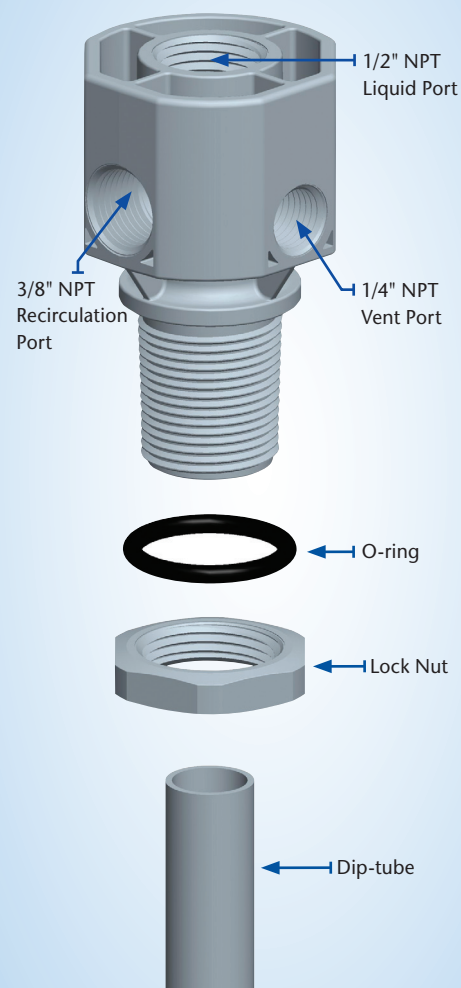

### Additional System Components Available Separately

- ✓ Bung plugs & bottle caps with integral 3/4" NPT thread
- ✓ Air filter, vent port
- ✓ Check valve, vent port
- ✓ Reducer bushings
- ✓ Foot valve for dip-tube
- ✓ Quick disconnect couplings



**Colder Products Company**  
1001 Westgate Drive  
St. Paul, Minnesota 55114  
U.S.A.

Phone: 651-645-0091  
Fax: 651-645-5404  
Toll Free: 800-444-2474  
info@colder.com  
[www.colder.com](http://www.colder.com)

**Colder Products Company GmbH**  
Schmalweg 50  
D-55252 Mainz-Kastel  
Germany

Phone: +49-6134-2878-0  
Fax: +49-6134-287828  
cpcgmbh@colder.com  
[www.colder.com](http://www.colder.com)

**Colder Products Company Limited**  
Room 1503, 15/F, SBI Center  
54 - 58 Des Voeux Road Central  
Hong Kong

Phone: 852-2987-5272  
Fax: 852-2987-2509  
asiapacific@colder.com  
[www.colder.com](http://www.colder.com)